

# Calling Card Telephone IP 110 MAG User Manual

8 November 2004



We thank you for buying our Calling Card Telephone IP 110 MAG and wish you success and enjoyment in using it.

The telephone is planned for easy operation by the client without any need of special explanation apart from looking at the instructions displayed on the front of the phone and following them.

We're sure that this telephone will be a good replacement to the existing system, using regular phone and random collection.

When using a calling card, the customer enjoys low rates for international and an intercity calls through the Prepaid Platform.

In order to have the most advantages of the Calling Card Telephone IP 110 MAG, please read the installation and operation instructions.

For operating instructions and technical support, please contact customer service.



## **Reliability of the product:**

The Calling Card Telephone IP 110 MAG is designed to be used as a medium connected to the country's communication system. The manufacturer won't be responsible for any damage caused due to improper use of this telephone and/or improper installation.

## **Humidity and dust:**

Avoid using the Calling Card Telephone IP 110 MAG in especially humid and dusty locations, otherwise some components may be damaged.

## **Comments:**

1. You can connect the Calling Card Telephone IP 110 MAG to the PSTN telephone line 48-60 volt DC 20-120 mA current line.
2. There will be no refund for prepaid cards.
3. Expiry date of the card is printed on it.

## **The package contains:**

1. Calling Card Telephone IP 110 MAG
2. Programming key
3. Warranty document
4. Manual for user

## Installation:

1. Connect Alkaline 9V battery.
2. Connect the telephone to the country's phone network, connect the Calling Card Telephone IP 110 MAG to the line socket in the wall.
3. Lift the Handset.
4. The display will show ( See page 5: Placing a call. Option onet) :

**Swipe The Card or  
Press "A"**

5. If the battery is not connected or empty, the display will show a message to the customer.

**WARNING!  
LOW BATTERY**

Function buttons: **A**, **B**, **C** and **D**

## Placing a call (magnetic calling call operation)

1. Lift the handset and listen for dialing tone.
2. Swipe the magnetic calling card.
3. Listen to instructions from the Prepaid Platform.
4. Upon hearing that your card PIN number has been accepted, enter your destination number, including country code in the case of an international call, and city code in the case of an inter-city call.

## Placing a call (manual operation)

1. Lift the handset and listen for dialing tone.
2. Press the fast-dial button **A** to call Prepaid Platform.
3. Listen to instructions from the Prepaid Platform and enter PIN number from card when requested to do so.
4. Upon hearing that your PIN number has been accepted, enter your destination number, including country code in the case of an international call, and city code in the case of an inter-city call.

## Follow on Call

In case of a need to dial an extra number, once the pin number was given already by the subscriber, there is no need to place back the handset. The only need in such a case would be to push first the button **B** follow the written instruction on the display, than dial the complete destination number.

## Redial function

For redialing the same number, do not replace the handset, but only press fast-dial button **C**

## Volume control function


Butten **D** serves to increase / decrease the volur

## Placing an emergency or toll-free call

1. Lift the receiver and listen for dialing tone
2. Dial a number



1. The user has to operate according to the recorded and displayed instructions.

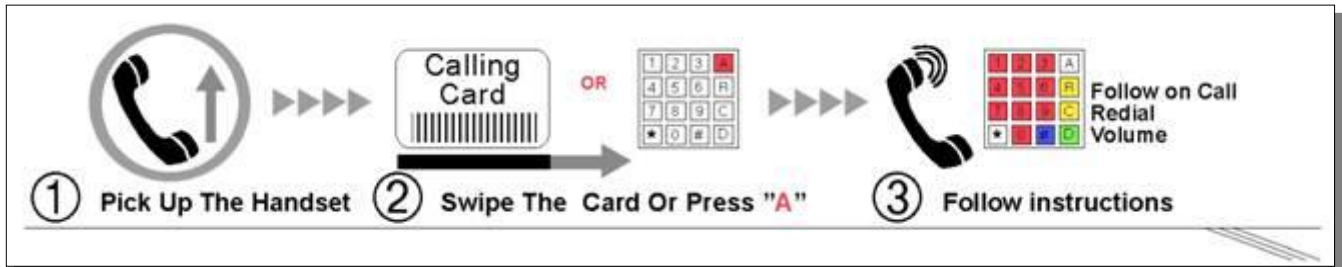


2. Instruction for using prepaid telephone cards ( For example ):




## Setup:

For entry to SETUP MENU:

1. Lift the Handset
2. Display is showing:

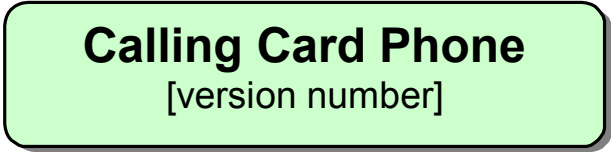

3. Insert **PROGRAMMING** key, turn the key to "Open" position for 1 second and turn back.
4. After display showing:

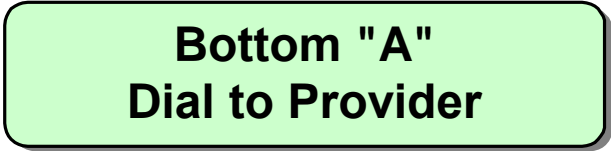

5. To scroll down on menu use button **D**, to scroll up use button **A**

## SETUP MENU

### Button A function

Function	Display	Note
<b>Button A functions</b>	<b>Bottom "A" Off</b>	Using button A to fast dial Access number , Support number or disable this button. Press <b>*</b> to switch Saved automatically.

### Access number

Function	Display	Note
<b>Access Number. 22 digits max.</b>	<b>Prov. No: xxxxxxxxxxx</b>	Enter Access Number. For save press <b>B</b> For pause 2 sec (displayed P) press <b>C</b>

### Support number

Function	Display	Note
<b>Support (Service) number. 22 digits max.</b>	<b>Support No: yyyyyyyyyy</b>	Enter Support Number. For save press <b>B</b> For pause 2 sec (displayed P) press <b>C</b>

### Delay Time

Function	Display	Note
<b>Delay Time, 0-39 sec.</b>	<b>Delay Time 05</b>	Delay time between dialing Access number and card (PIN) number. For change press <b>*</b> Saved automatically.

## Incoming Call Keyboard Off

Function	Display	Note
Using Keyboard after Incoming Call	In.Call Keyboard Off	Keyboard can be used after Incoming Call. For change press * Saved automatically.

## Reader On

Function	Display	Note
Magnetic card reader On/Off	Reader On	For change press * Saved automatically.

## Emergency and Free Numbers

Function	Display	Note
Contains 10 free numbers, each of 4 digits/symbols Fr01- Fr10	Free No. Fr01: aaa ..... Fr10: zzz	Free prefix or emergency service. Opened to free dialing. Changing: Enter number. Press <b>B</b> - Save to memory. Press <b>C</b> to clear an existing prefix. Saved automatically.

## Dialing mode: Tone (DTMF) or Pulse

Function	Display	Note
Dialing Method	Dialing Mode: Tone Dialing	Access number dialing method Press * to change Dialing Mode. Saved automatically. Tone Dialing -default

## Start Tone ( Lift handset PAYPHONE Tone )

Function	Display	Note
Start Tone	Start Tone Off	Function On/Off. Press * to switch on/off (saved automatically).

## Incoming Call P.Tone ( Incoming Call PAYPHONE Tone )

Function	Display	Note
In.Call P.Tone	In.Call P.Tone On	Function On/Off. Press * to switch on/off (saved automatically).

## Button B On/ Off

Function	Display	Note
Using button B	Button B On/Off On	Press * to change. Saved automatically.

## Button B "Follow on Call" special signaling

Function	Display	Note
Dialing special "Follow on Call" signal to provider, each of 5 digits/symbols	Button B: ## ___	Enter digits/symbols. For save press <b>B</b> For pause 2 sec (displayed P) press <b>C</b>

## Button C On/ Off

Function	Display	Note
Using button C	Button C On/Off Off	Press <b>*</b> to change. Saved automatically.

## Button C "Redial" special signaling (not used)

Function	Display	Note
Dialing special "Redial" signal to provider, each of 5 digits/symbols	Button C: 11 ___	Enter digits/symbols. For save press <b>B</b> For pause 2 sec (displayed P) press <b>C</b>

## Language

Function	Display	Note
Language	English	Press <b>*</b> to change. Saved automatically.

## DTMF parameters: Make

Function	Display	Note
Time making DTMF automatically, mS	Make 0200	Press <b>*</b> to switch this time between 100 – 500 mS Saved automatically.

## DTMF parameters: Break

Function	Display	Note
Pause time between automatic DTMF's , mS	Break 0200	Press <b>*</b> to switch this time between 100 – 500 mS Saved automatically.

## Hang Up Tone On / Off

Function	Display	Note
Hang up tone	Hang Up Tone Off	Press <b>*</b> to switch. Saved automatically.

## Hang Up Tone special signaling

Function	Display	Note
Hang up tone Special signalling	Hang Up Tone *1	Enter number. Saved automatically.