

SETUP v8LX

For entry to SETUP MENU push the PROGRAMMING button and lift the handset. After 2 sec. release the PROGRAMMING button. To scroll down on menu use button **[D]**, to scroll up use button **[A]**, to exit hang up the phone.

Button A On/Off : Using button **[A]** to fast dial Access Number. Press **[*]** to switch.

A1 xxxxxxxxxxxxxxxxx : Access number. Up to 22 digits.
Enter number. To save press **[B]**, to pause 2 sec. press **[C]** .(displayed P)

Delay Time 05 : Delay time permitted between dialing Access number and card number.0-39 sec.To change press **[*]**

In.Call Keyboard On/Off: Keyboard can be used after incoming call.
Press **[*]** to switch.

Reader On/Off: Barcode reader On or Off. Press **[*]** to switch.

Mode Public use/ Private use: Telephone profile. Press **[*]** to switch.

Free No. Fr01-Fr10: Emergency and Free Numbers or prefixes. Opened to free dialing. Contains 10 free numbers, each of 3 digits/ symbols.
Enter number. To save press **[B]**, to clear press **[C]**. Public use mode only.

Closed No. CI01-CI10: Closed prefixes or service.
Enter number. To save press **[B]**, to clear press **[C]**. Private use only.

Dialing mode pulse/ tone: Access Number dialing method. Press **[*]** to switch.

Start P.Tone On/Off: Lift handset PAYPHONE Tone. Press **[*]** to switch.

In.Call P.Tone On/Off: Incoming Call PAYPHONE Tone. Press **[*]** to switch.

Language Local/ English. User messages language. Press **[*]** to switch.

Connections (in box)

